

Product Bulletin

August 13, 2014

GoFree Pro Battery Locking

Users of the GoFree Pro battery backpack vacuum should ensure the battery pack is locked into place when using and when charging. Without being locked into place, arcing may occur between the connections along the electrical circuit, damaging the lead connectors between the battery and the vacuum or between the battery and the charger. Such damage is not covered by the product's Limited Warranty and the battery and charger are not field-serviceable.

The battery is locked into place when the locking mechanism knob is vertical, perpendicular to the floor. See illustrations below.

