

Product Bulletin

January 18, 2010


Upright Improvements

As part of our continuous improvement efforts, ProTeam has updated the upright handle assembly to arrive with the electrical system already in place. This improvement will help make initial set up of the vacuum faster and easier.

The power cord now comes fully seated into the vacuum and only two quick steps are needed to complete set up with no tools required.


Step 1

Insert the handle tube into the channel on the bag housing and press downward until it is 2-3 inches inside the channel. It will be correctly inserted when the handle bushing hole in the handle tube aligns with the nut plate hole in the bag housing.

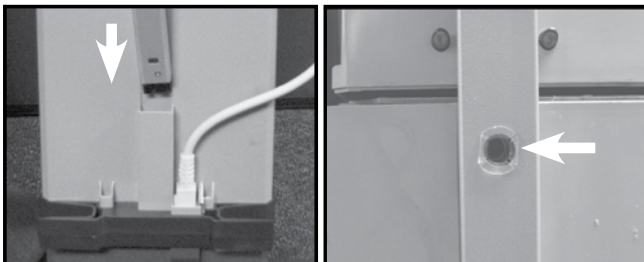


Step 2

The cord clasp is already on the handle and just needs to be secured. Slide the clasp along the handle until the holes align. Insert ratchet fastener into cord clasp opening by pushing with thumb to connect cord clasp to handle.

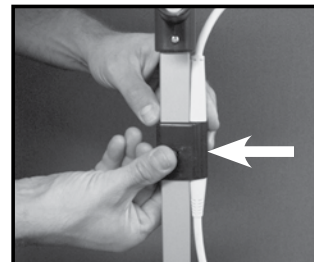

The new upright handle assembly will begin early in 2010 with machines having the following serial numbers.
ProForce 1500XP – 57-054451 and above
ProForce 1500 – 56-030851 and above

ProTeam has also added a bumper to the cord wrap bracket to absorb impact and prevent handle breakage if dropped from an upright position.

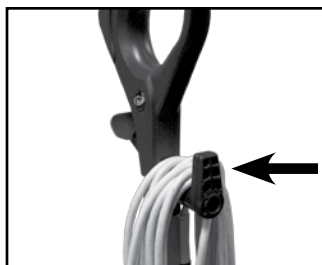

For more information on how ProTeam can assist you in improving the health of your facility, contact your local sales representative or call ProTeam Customer Service at 866.888.2168 or email customerservice@pro-team.com.